

A decorative element on the left side of the page consisting of two vertical stripes: a red one on the left and a blue one on the right.

INSTRUCTIONS & WARRANTY

Clubmaster Travel Clock

BRISTON 

INSTRUCTIONS

We congratulate you on the purchase of your BRISTON table clock and thank you for your trust.

BRISTON offers an elegant object that fits ideally on an office table, on a nightstand or in a bookcase that everyone can take on a trip.

Your BRISTON travel alarm clock should be serviced regularly to keep it working properly.

Intervention intervals vary depending on the model, the climate and the care taken by its owner.

As a general rule, we recommend that you follow the steps below in order to preserve the condition of your watch as long as possible.

> Temperature: avoid temperatures exceeding 0/100°F; -20/+40°C and extreme conditions.

> Avoid contact with alcohol, perfume, detergents and cosmetic products to prevent corrosion.


> Push buttons: do not press any buttons while under water to prevent water from entering the mechanism.

> Screwing winder: Please check that the winder is in normal position against the case to prevent any water entering the mechanism.


> Check your model's ATM level so that you know how deep you can use it. (5 ATM = 50 meters of depth – 165 feet). You can wash your hands but not swim with your watch.

To remind, your BRISTON watch can only be used in the following conditions: washing hands & shower. **DO NOT USE FOR DIVING ACTIVITY or other WATER SPORT.**

USE OF THE CLUBMASTER TRAVEL CLOCK

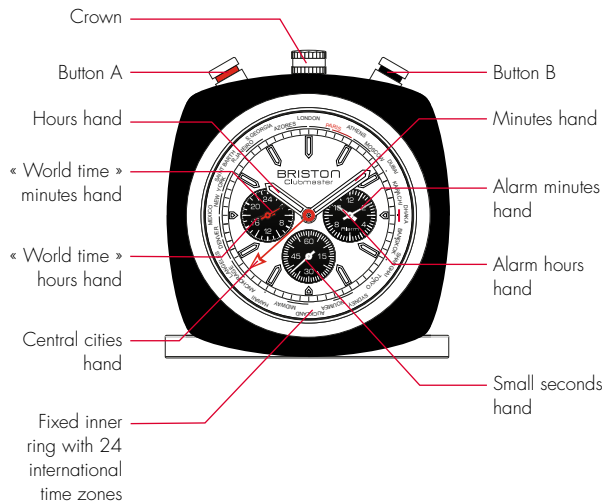


USE OF THE CLUBMASTER TRAVEL CLOCK

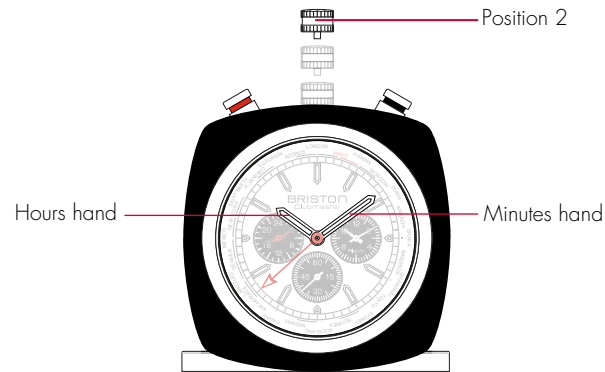


A) Time setting

- 1 - Gently pull the crown into its 2nd position.
- 2 - Turn the crown to adjust the hour and minute hands.
- 3 - Press the winder back into the closed position against the case

CROWN POSITION

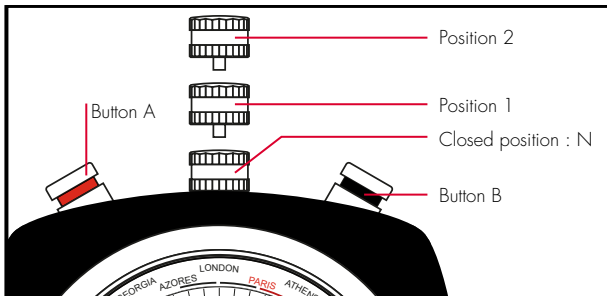


	N=Normal	Position 1	Position 2
Crown	Free	Turn clockwise for date setting (hidden)	Turn for time setting
Button A	World time city setting (clockwise)	Sound demonstration (more than 2 seconds)	*1 - World time hand, alarm hand and city hand position adjustment
Button B	World time city setting (anticlockwise)	Alarm time setting (counter at 3 o'clock)	*1 - World time hand, alarm hand and city hand position adjustment

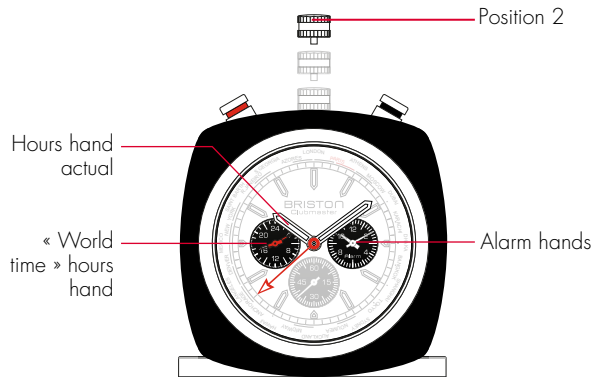

*1 - World time hand, alarm hand and city hand position adjustment

Pull out the crown in second position (please stay at this crown position to respect the procedure indicated below)
If the world time hands and the alarm hands are not adjusted to the current time or the central city hand is not in the «0» position, follow the procedures below to set them.

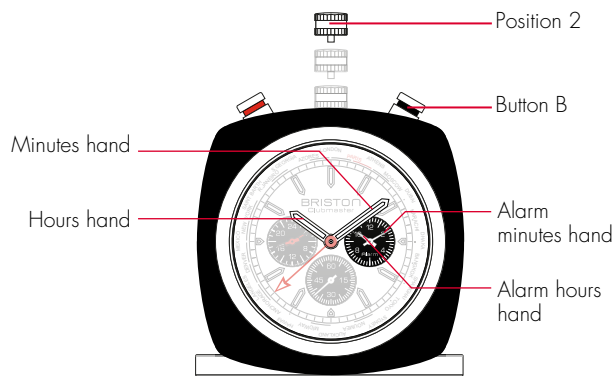


B) Setting of the alarm hands:

Press the button B repeatedly to set the alarm hands to the time the main time hands indicate.

Pull the crown out into the 2nd position.

- If the alarm has been set and the crown is pulled out to the 2nd click position, the world time and alarm hands will turn to indicate the current time.

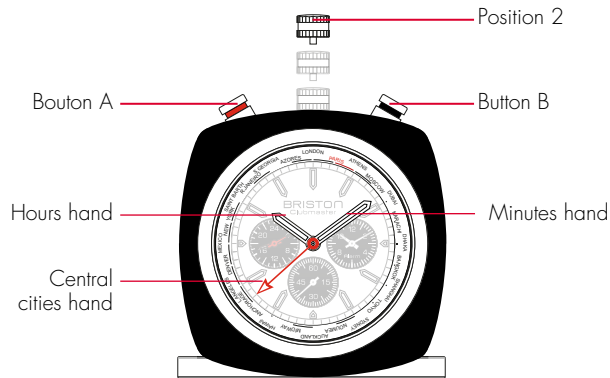


C) Setting of the world time hands

1- Once you have selected the city, press the button A for 2 seconds. The worldtime hands (counter at 9 o'clock) turn a full round.

2 - Press the button B to set the world time hands to indicate the time in the city you selected in the last step.

3 - Push the crown back to the normal position.

USE OF THE CLUBMASTER TRAVEL CLOCK

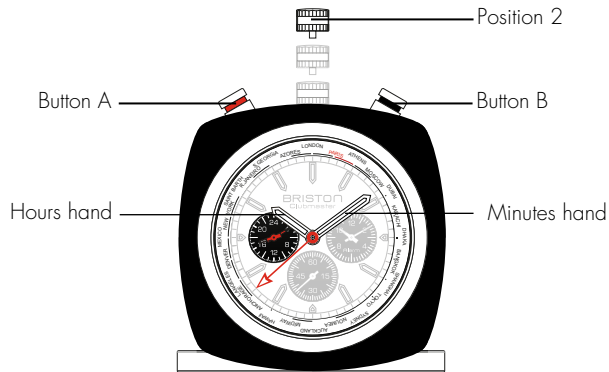


Tips : When setting the hands, the hand moves quickly if the button B is kept pressed.

D) Setting of the world time hands

1 - To change of timezone, you just need to press the button A to mode the central city hand city clockwise, or press the button B to move the hand anticlockwise

– Each press, the worldtime and city hand at 9 o'clock will adjust automatically.

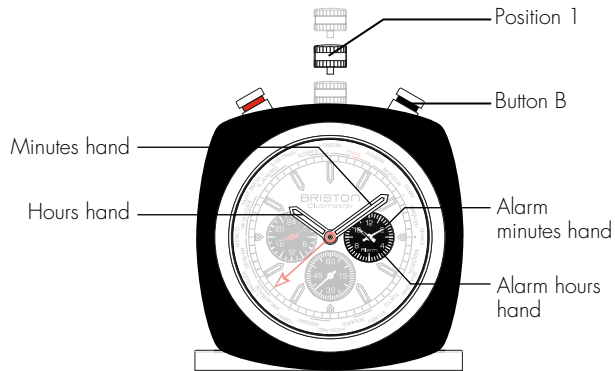

E) How to use alarm function

The alarm can be set to ring only once at a designated time within the coming 12 hours. The alarm time can be set in one minute increments.

Before using the alarm, check that the alarm hands are adjusted to the current time. If the alarm hands are not adjusted to the current time, follow the procedure in «World time hand, alarm hand and city hand position adjustment».

1 - Pull the crown out to the 1st click position.



2 - Press the button B repeatedly to set the alarm hands to the desired alarm time.

- The single-time alarm cannot be set for a time more than 12 hours ahead of the current time. While you keep the button B pressed to advance the alarm hands quickly, they stop when they indicate the current time and the alarm is disengaged. In that case, release the button B, and then, press button again to set the alarm hands at the desired time.

3 - Push the crown back to the normal position. The alarm is automatically engaged.

Tips : While the crown is at the normal position, the alarm hands indicate the current time when the alarm is disengaged and the designated alarm time when it is engaged.

USE OF THE CLUBMASTER TRAVEL CLOCK

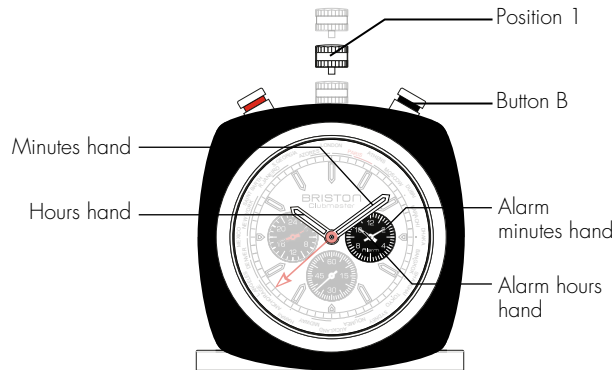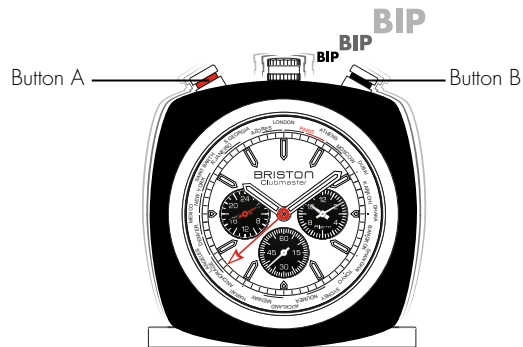


F) How to stop the alarm

At the designated time the alarm rings for 20 seconds, and it is automatically disengaged as it stops. To stop it manually, press any button.

Tips: While the alarm is ringing, pressing any button will only stop the alarm, and no world time operation can be made.

How to cancel the alarm time you have set

- 1 - Pull the crown out to the 1st click position.
 - 2 - Press the button B until the alarm hands stop and indicate the current time.
 - 3 - Push the crown back to the normal position.
- The alarm hands move quickly if the button B is kept pressed

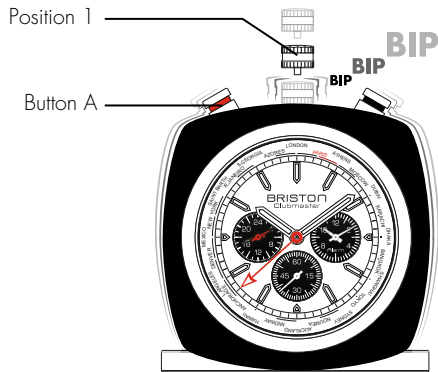


How to preview the sound demonstration

- 1 - Pull the crown out to the 1st click position.
- 2 - Press and hold the button A for longer than 2 seconds.
The alarm sound can be heard while the button A is kept pressed
- 3 - Push the crown back to the normal position.

How to use the world time function

The watch can display the time in any one of 24 time zones around the world.


The world time dial indicates the time in 24 hour format.

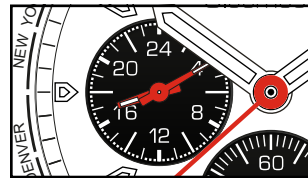

When the city to which the city hand points on the bezel is observing daylight saving time, select the city that is adjacent clockwise to compensate for the 1 hour time difference.

Example: Daylight saving time for New York & the city hand should point SAINT BARTH

USE OF THE CLUBMASTER TRAVEL CLOCK

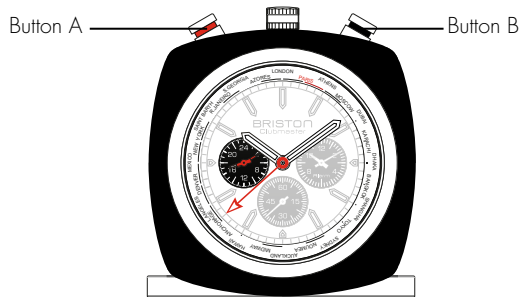


How to use the world time function


- 1 - Press the button A or B until the city hand points to the city whose time you wish to know.
- 2 - Press the button A to select a city. (The city hand turns clockwise)
- 3 - Press the button B to select a city. (The city hand turns anticlockwise)

Daylight saving time

If daylight saving time is used in a city on the bezel, an arrow mark is printed to the right of the city marker.

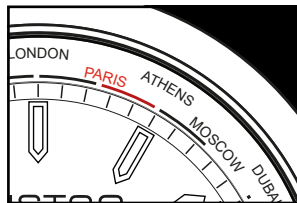


Power depletion warning function

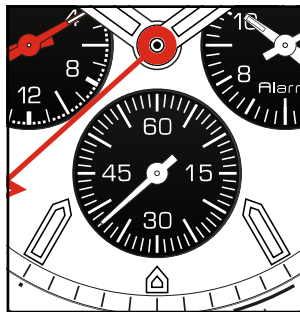

When the battery nears its end, the small second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

- The watch remains accurate while the small second hand is moving at two-second intervals.

USE OF THE CLUBMASTER TRAVEL CLOCK

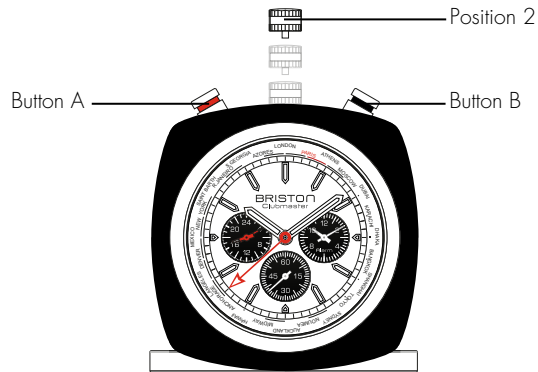

2 - Press the buttons A and B at the same time for longer than 2 seconds.

3 - Push the crown back to the normal position.

System reset

When an abnormal display appears, reset the built-in integrated circuit.

1 - Pull the crown out to the 2nd click position.

WARRANTY

Thanks to the BRISTON warranty, any BRISTON table clock that has to be repaired due to a manufacturing fault will be repaired free of charge.

The warranty certificate must be completed, stamped and signed by the authorized BRISTON retailer.

The following damages or cases are not covered by the BRISTON warranty:

- > any damage resulting from inadequate or insufficient care, an accident or normal wear and tear;
- > the watch dial, hands, case, cristal K1, battery and any other accessory sold with the table clock or contained in the packaging;
- > any complaint associated with damage or injury caused directly or indirectly by wearing the BRISTON watch;

> a functional failure following the battery running out;

> loss of water resistance following exposure to water at a pressure greater than 50 meters OR loss of water resistance after using the watch or chronograph buttons under water OR damage following the use of alcohol or detergents OR significant damage or corrosion on the watch.

BRISTON will send a bill for its fees to clients claiming additional services or who are unable to present a valid warranty certificate.

The information above is classed as technical information and will be subject to final approval from BRISTON. All cases not covered by the above list will be dealt with accordingly. The information contained in this document belongs to BRISTON and may not be reproduced without its authorization.

Every BRISTON timepiece comes with a 2 YEARS INTERNATIONAL WARRANTY against defects in material and workmanship. This warranty covers all parts except the battery and all above mentioned elements.

We will not be responsible for any consequential damages arising from the ownership or use of timepiece.

Should your timepiece become inoperative due to a defect in materials or workmanship, please return it to our office.

In case of substitution of your BRISTON table clock, we will always try to find a similar product for your best satisfaction.

BRISTON can not guarantee exact & similar patterns or colors specially with the "tortoise shell" pattern as the cellulose acetate is handmade & unique.

Please include your watch, the completed warranty form (with stamp of the shop) together with your proof of purchase clearing stating the nature of the fault.

The limited warranty is void if the defect is discovered to be caused by abuse or tampering with the watch.

Please first contact the nearest authorized BRISTON dealer who will proceed with the return or repair OR contact our customer service by e-mail : **sc@briston-watches.com**

www.briston-watches.com